



Quick Reference Guide

Congratulations on your new GPS Plotter. The device must be installed according to the manual, which comes with the device, and by an electronics technician. Electronics on board must always be installed with a fuse.

The front of your device is waterproof when the chart reader is correctly closed.

Place your SD card in the chart reader on the front of the device and close the cover completely. It is very important that the cover is completely closed so that no water can enter.

On/off: Press POWER. After a few seconds your plotter starts up with the settings which were last used – For turning off the unit press and hold the POWER button for 4 seconds and release. Press ENT (Enter) if you want to confirm input or data.

Press ESC (Escape) if you want to go back 1 step.

Press MODE if you want to change what is displayed on the screen. By pressing several times you change from one screen display to the next, and after pressing the button 5 times you will see the first screen display.

Press MENU if you want your options displayed. Press 2 times and you will return to the main menu.

Press F (Function) if you want to select other functions, such as tide, search, etc. MOB is Man-Over-Board. When this button is pressed, your current position is registered so that you can quickly find your way back.

Press the arrows facing towards each other to reduce the scale of the chart, and press the arrows facing away from each other to increase the scale.

Put the sun cover on your device when not in use.

Enjoy your new GPS Plotter!

01 AUG 2014/TSJ